



First of all: whenever you come across unfamiliar terms, look up the Glossary -- Open www.bigbearpachisloshop.com and click "[Glossary](#)" in the left column.

Game

You insert three tokens, hit the spin knob, and push the reel stop buttons. This sequence is called a "Game." Let's say, "You may need 20 games to get a Big Bonus" -- This means you need to repeat this sequence 20 times until you win a Big Bonus

3 Bet and 5 Wining Lines

You must put in three tokens or credits (Max Bet) to spin the reels. A max bet gives you five lines to get a winning combination. Five winning lines are:



Winning Combinations and Prizes

Dream Seven Max offers two principal prizes -- a bonus round and small prizes. A bonus round divides into a Big Bonus and a Regular Bonus, and small prizes consist of the Cherry, the Grape, the Bell, and a Replay. For the details of a Big Bonus and a Regular Bonus, see "[Big and Regular Bonuses](#)" in the section "Pachislo World" on www.bigbearpachisloshop.com.

	15 + Big Bonus
	15 + Regular Bonus
	15 (Cherry)
	7 (Grape)
	3 (Bell)
	2 (Cherry)
	Replay
During a bonus round	
	3 + Jac-in
During Jac Games	
	15

means that you have either or on the left and middle reels and on the right reel.

Let's say, you've got on one of five lines. At this point you win 15 credits and enter a Big Bonus. Likewise, when you have , you get 15 credits and enter a Regular Bonus. is the Grape, paying out 7 credits. is called

"Cherry" -- when you have a cherry on the left reel, you win two credits no matter what symbols you have on the right and middle reels. 🍒🍒🍒 is a prize "Replay" in normal game mode and a "Jac-in" during a bonus round.

How to Win?

 
Understand you never win a Regular or a Big Bonus out of blue -- you must go through a winning process. That is, you play "Normal Games" first, get a "Winning Sign," and move on to "Stand-by Games" that offer you chances to win a Regular or a Big Bonus. For details, see "[How to Win?](#)" in the section "Pachislo World." Also see "[Winning Signs and Small Prizes](#)" to win small prizes.

Winning Signs

To win a bonus round, you catch winning signs displayed on the reels. In other words, you need to know certain combinations that lead to winning combinations for a bonus round. Here are examples -- when you see one of those you should concentrate on shooting <777>.


Winning Signs

1.

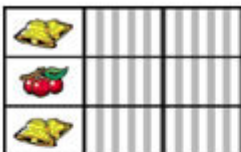


Stop the left reel first. When you have these three symbols, it's a winning sign no matter what symbol you have on the middle and right reels.

 2.

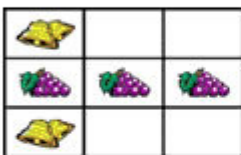


 3.

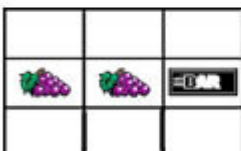

<Grape-Graoe-Bar> can be on any of five winning lines.

 4.

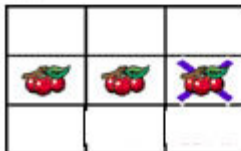

You have two cherrys on the left and middle reels, but don't win.

Winning signs also include the sound when you start spinning the reel. If you hear different sound or delayed sound, it may be a sign for oncoming bonus round!



Bonus Round Indicator

When this indicator illuminates, all you need is to shoot <777>!!

To get more credits from a Big Bonus...

Here are tips to earn full-credits from a Big Bonus.

Avoiding a Jac-in

You can win the full 400 credits from the Big Bonus by avoiding a Jac-in -- without it you get about 370 credits.



- (1) Entering a bonus round, you stop the reels from left to right.
- (2) When you hear different sounds, that's a sign for a Jac-in. Stop the reels from right to left.
- (3) At the third shot, you nail a "Bell" at the reel joint -- see the photo left.

Eye Shooting

To enjoy Dream Seven Max to the fullest, you might want to try the eye shooting. For details, see "[Eye Shooting](#)" in the section "Pachislo World."



Copyright © 2005 GAK Trading, Inc. All rights reserved.

Reference

<http://www.pachinkomuseum.com>

<http://www.pachinkovillage.ne.jp>

<http://www.pachimaga.com>

<http://www.aruze.com>